

<p>Content:</p>	<p>Dimension:</p>
------------------------	--------------------------

EAN:	W	lm	K	R _a	T _a (°C)	Vac	Hz	L ₁ (mm)	g
8719157049498	8.2	1150	2700	80	-20...+45	220-240V	50/60Hz	604	90
8719157049504	8.2	1150	3000	80	-20...+45	220-240V	50/60Hz	604	90
8719157049511	8.2	1150	4000	80	-20...+45	220-240V	50/60Hz	604	90
8719157049528	8.2	1150	6500	80	-20...+45	220-240V	50/60Hz	604	90
8719157049535	11.2	1575	3000	80	-20...+45	220-240V	50/60Hz	908	130
8719157049542	11.2	1575	4000	80	-20...+45	220-240V	50/60Hz	908	130
8719157049559	11.2	1575	6500	80	-20...+45	220-240V	50/60Hz	908	130
8719157049566	13	2100	2700	80	-20...+45	220-240V	50/60Hz	1213	180
8719157049573	13	2100	3000	80	-20...+45	220-240V	50/60Hz	1213	180
8719157049580	13	2100	4000	80	-20...+45	220-240V	50/60Hz	1213	180
8719157049597	13	2100	6500	80	-20...+45	220-240V	50/60Hz	1213	180
8719157049603	16.5	2650	2700	80	-20...+45	220-240V	50/60Hz	1514	230
8719157049610	16.5	2650	3000	80	-20...+45	220-240V	50/60Hz	1514	230
8719157049627	16.5	2650	4000	80	-20...+45	220-240V	50/60Hz	1514	230
8719157049634	16.5	2650	6500	80	-20...+45	220-240V	50/60Hz	1514	230

With Electromagnetic Ballast

Steps:
A: Turn off power supply.
B & C: Remove lamp.
D & E: Replace starter.
F: Insert LED lamp into lamp holder.
G: Secure the position by turning the lamp 90°.
H: Switch the power on and check for lamp starting.
Remarks: the electromagnetic ballast will have power consumption.

Direct Mains Connection

Steps:
A: Turn off power supply.
B & C: Remove lamp.
D: Remove ballast.
E: Applicable for T8 EM/Mains
F: Insert LED lamp into lamp holder.
G: Secure the position by turning the lamp 90°.
H: Switch the power on and check for lamp starting.

Circuit Breaker	C16	B16
8.2W	192PCS	150PCS
11.2W	180PCS	141PCS
13W	175PCS	137PCS
16.5W	145PCS	114PCS



This lamp may not be suitable for use in all applications where a traditional fluorescent lamp has been used. The temperature range of this lamp is more restricted. In cases of doubt regarding the suitability of the application the manufacturer of this lamp should be consulted.



This lamp is designed for general lighting service (excluding for example explosive atmospheres).



No modifications of the luminaire which the LED lamp is to be used with are to be made.



This lamp will work with Mains or EM Ballasts ONLY.



This lamp is not suitable to be used in electronic ballasts designed for double capped fluorescent lamp(s).

<p>EN</p> <p> Lamp suitable for 50Hz or 60Hz operation.</p> <p> Lamp not suitable for emergency operation.</p> <p> Lamp to be used in dry conditions or in a luminaire that provides protection.</p> <p> Dimming not allowed.</p> <p> LED replacement starter.</p>	<p>NL</p> <p> Lamp geschikt voor werking op 50Hz of 60Hz.</p> <p> Lamp niet geschikt voor noodverlichting.</p> <p> Lamp dient gebruikt te worden in droge omstandigheden of in een armatuur die bescherming biedt.</p> <p> Niet gebruiken met dimmers.</p> <p> LED-vervangingsstarter.</p>
<p>DE</p> <p> Lampe geeignet für den betrieb bei 50Hz oder 60Hz.</p> <p> Lampe nicht zur Notbeleuchtung geeignet.</p> <p> Lampe muss unter trockenen Bedingungen oder in einer Leuchte verwendet werden die ausreichenden Schutz bietet.</p> <p> Nicht mit dimmern verwenden.</p> <p> LED-Ersatzstarter.</p>	<p>FR</p> <p> Lampe adaptée à un fonctionnement à 50Hz ou 60Hz.</p> <p> Lampe ne convenant pas à un fonctionnement de secours.</p> <p> Lampe à utiliser dans des conditions sèches ou dans un luminaire offrant une protection.</p> <p> Ne pas utiliser avec des variateurs.</p> <p> Démarreur de remplacement LED.</p>
<p>IT</p> <p> Lampada adatta per 50Hz o 60Hz funzionamento.</p> <p> Lampada non adatta al funzionamento di emergenza.</p> <p> Usare all'asciutto o in un apparecchio che fornisce protezione.</p> <p> Regolazione del flusso non consentita.</p> <p> Starter sostitutivo LED.</p>	<p>ES</p> <p> Lámpara adecuada para 50Hz o 60Hz funcionamiento.</p> <p> Lámpara no adecuada para el funcionamiento de emergencia.</p> <p> Lámpara para uso en condiciones secas o en una luminaria que proporcione protección.</p> <p> No se permite regulación.</p> <p> Arrancador de repuesto LED.</p>
<p>SWEDISH</p> <p> Lampa lämplig för 50Hz eller 60Hz drift.</p> <p> Lampan är inte lämplig för nöddrift.</p> <p> Lampa för användning i torra förhållanden eller i en armatur som ger skydd.</p> <p> Dimming ej tillåten.</p> <p> LED-ersättningsstartare.</p>	